

DEVICE CARE AND CLEANING



Device Care

DO	DO NOT
<ul style="list-style-type: none">• Clean up spills right away• Carefully handle cords and cables• Keep away from pets, infants, and toddlers• Be cautious of plugged in charging cords, they can be a tripping hazard• Carry your device in the closed position to avoid damage to the hinge• Choose a protective case that does not put too much pressure on the screen or cover• Clean regularly with a soft, dry, microfiber cloth or an anti-static cloth	<ul style="list-style-type: none">• Eat or drink close to your device• Leave your device unattended, always keep it in a locked secure location• Leave your device in a hot or cold vehicle for extended periods of time• Draw, write, or sticker your device• Place heavy objects on top of your device• Lift or carry the device by the screen• DO NOT spray liquid cleaner directly on your device

Device Cleaning and Santizing

It is essential that all devices are properly cleaned/sanitized. Using at least a 91% alcohol-based cleaner will allow for a full, deep clean of the device.

Follow these steps:

1. Turn off your device
2. Dampen a cloth with cleaner; be sure it isn't too wet.
3. Wipe the keyboard, pressing gently on each key to clean.
4. Wipe the device along the rim of the screen.
5. Gently clean the screen. Use circles in multiple areas to ensure every part of the screen is covered.
6. Close the device and wipe the outside.
7. Let the device dry.
8. Ensure it still powers on.
9. Please contact your Vartek Team if there are any issues with this.

